


# MANUAL DE MONTAGEM

ASSEMBLY INSTRUCTIONS

INSTRUCCIONES DE MONTAJE

NOTICE DE MONTAGE


MONTAGEANLEITUNG

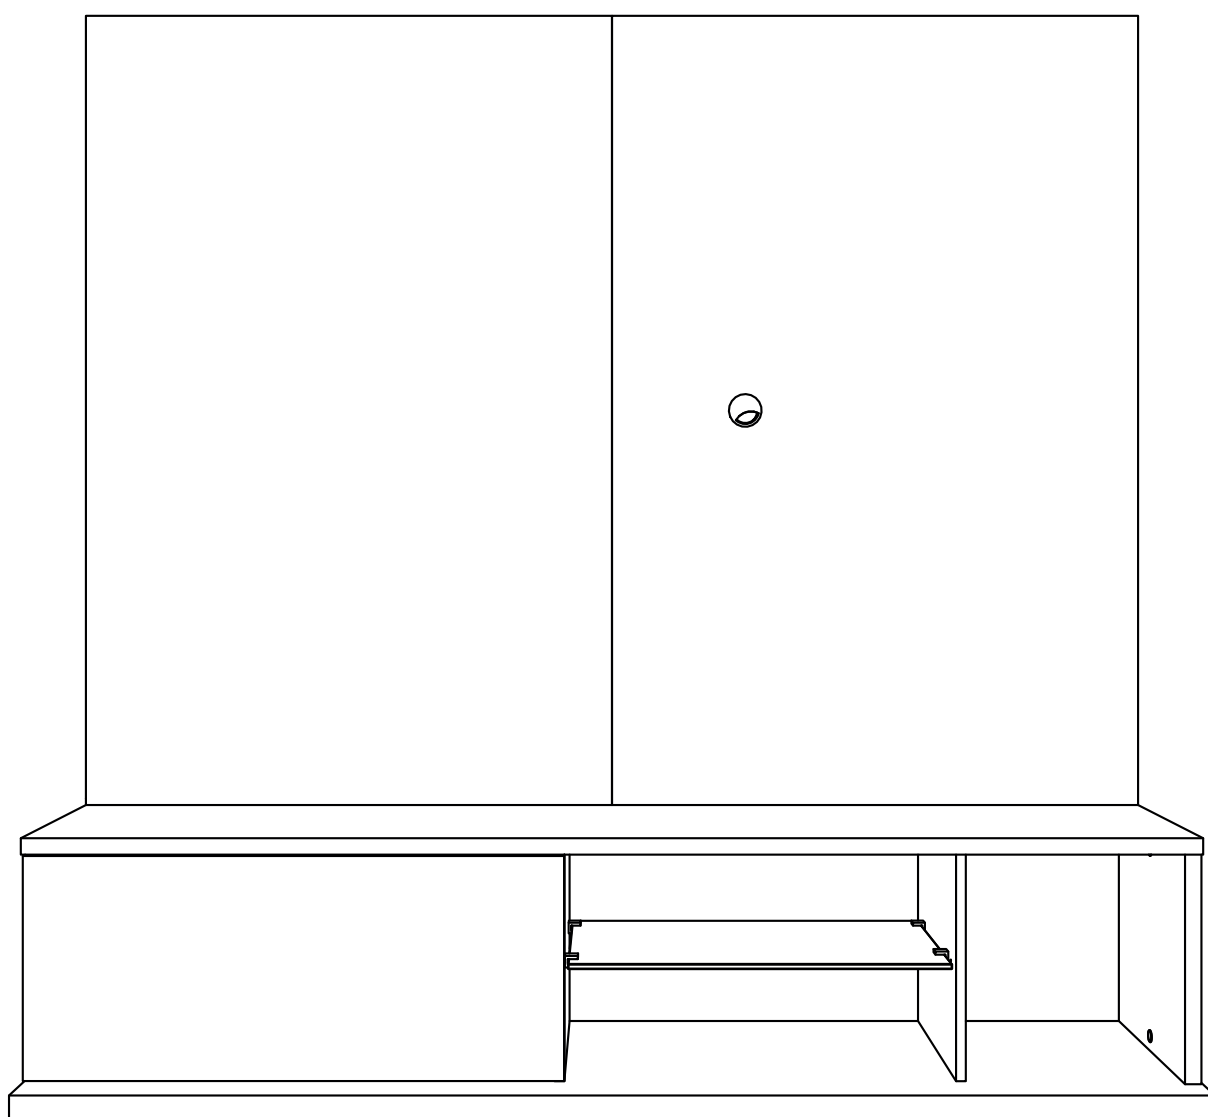

COD BR: 29800

ADESIVO  
 STICKER  
 ADHESIVO  
 AUTOCOLLANT  
 AUFKLEBER

COD. 1668




A

COD. 9425




C

COD. 8903



D

COD. 2014



E

COD. 4157



F

PASSA FIO  
 WIRE CHANNEL  
 PASAJE DE ALAMBRE  
 PASSE-CÂBLES  
 RÜCKWANDVERBINDER

COD. 0357



G

SUPORTE TV  
 SUPPORT TV  
 SOPORTE TV  
 SUPPORT MURAL POUR TV  
 FERNSEHSTÄNDER  
 1X

COD. 0348



J

COD. 2088




K

COD. 0607




L

COD. 9070



M

COD. 4439

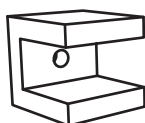

N

COD. 10063




O

COD. 9895




P

COD. 2762



Q

COD. 10084



R

COD. 1533




S

COD. 7519




T

COD. 3557



U

COD. 3706



V

COD. 1861




X

COD. 6244




Z

VIDRO  
 VIDRIO  
 GLASS  
 VERRE  
 GLAS



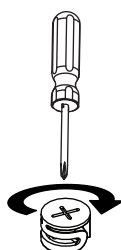


DESCRIÇÃO/DESCRIPTION/DESCRIPCIÓN/DESCRIPTION/BESCHREIBUNG

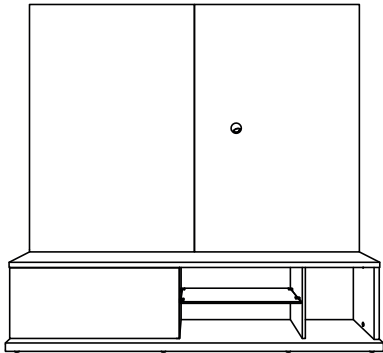


L:1800mm A:1782mm P:440mm  
W:70.86in H:70.15in D:17.32in  
L:1800mm A:1782mm P:440mm  
L:1800mm H:1782mm P:440mm  
B:1800mm H:1782mm T:440mm

| CÓD:29800                               |                                                         |                 |               |                 |                |                      |                                      |
|-----------------------------------------|---------------------------------------------------------|-----------------|---------------|-----------------|----------------|----------------------|--------------------------------------|
| PEÇA<br>PART<br>PIEZA<br>PIECE<br>STÜCK | QUANTIDADE<br>QUANTITY<br>CANTIDAD<br>QUANTITÉ<br>MENGE | DESCRIÇÃO       | DESCRIPTION   | DESCRIPCIÓN     | DESCRIPTION    | BESCHREIBUNG         | CAIXA<br>BOX<br>CAJA<br>BOÎTE<br>BOX |
| 13                                      | 01                                                      | BASE            | BASE          | BASE            | BASE           | BASIS                | 01                                   |
| 14                                      | 01                                                      | LATERAL INTERNA | INTERNAL SIDE | LATERAL INT.    | CÔTÉ INTÉRIEUR | INNERE SEITE         | 01                                   |
| 15                                      | 02                                                      | LATERAL INTERNA | INTERNAL SIDE | LATERAL INT.    | CÔTÉ INTÉRIEUR | INNERE SEITE         | 01                                   |
| 16                                      | 01                                                      | TAMPO           | TOP BOARD     | CUBIERTA        | PLATEAU        | PLATTE               | 01                                   |
| 17                                      | 01                                                      | PORTA           | DOOR          | PUERTA          | PORTE          | TÜR                  | 01                                   |
| 18                                      | 01                                                      | FUNDO           | BACKPLATE     | FONDO           | FOND           | RÜCKWAND / BODEN     | 01                                   |
| 19                                      | 01                                                      | PAINEL DIREITO  | PANEL RIGHT   | PANEL DERECHO   | PANNEAU DROIT  | RECHTE VERKLEIDUNG   | 02                                   |
| 20                                      | 01                                                      | PAINEL ESQUERDO | PANEL LEFT    | PANEL IZQUIERDO | PANNEAU GAUCHE | PANEEL LINKS         | 02                                   |
| 21                                      | 02                                                      | SARRAFO LATERAL | SIDE BATTEN   | SOPORTE LATERAL | LATTE LATÉRALE | SEITLICHE HOLZLEISTE | 02                                   |
| 22                                      | 01                                                      | LATERAL         | SIDE          | LATERAL         | CÔTÉ           | SEITE                | 01                                   |

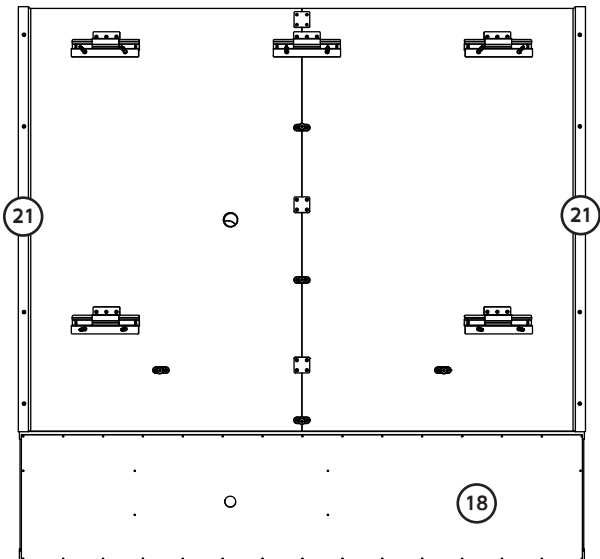
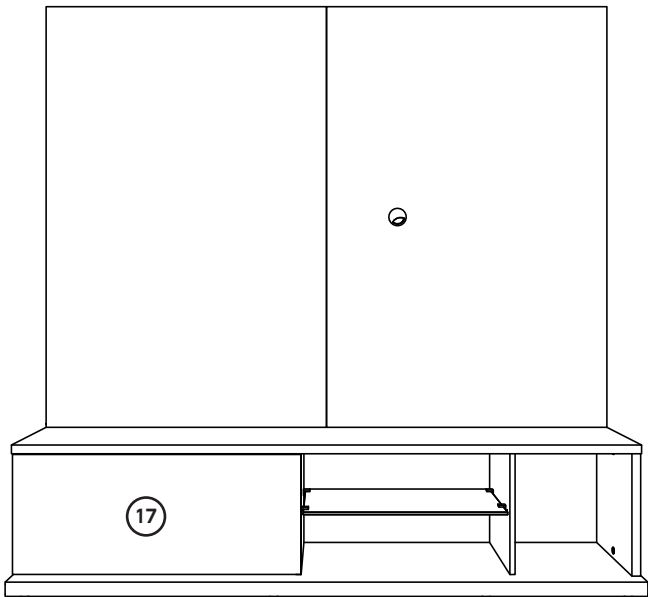
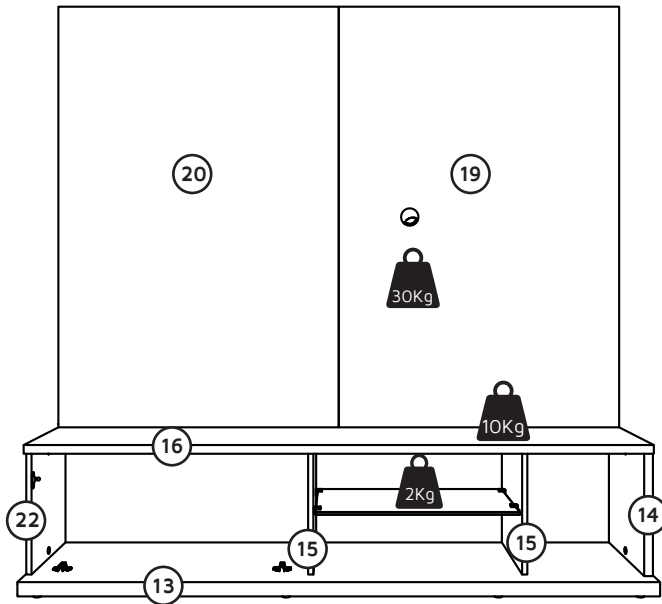


30Kg = 66Lb  
2Kg = 4Lb  
10Kg = 22Lb


01

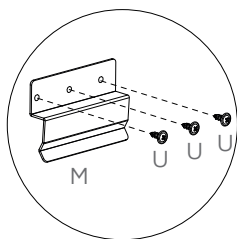


UTILIZE COLA ANTES DE APARAFUSAR  
 APPLY GLUE BEFORE TIGHTENING THE SCREWS  
 EL USO DE PEGAMENTO ANTES DE ATORNILLAR  
 UTILISEZ LA COLLE AVANT DE VISSER.  
 VOR DEM VERSCHRAUBEN VERWENDEN SIE KLEBER.

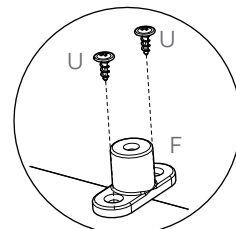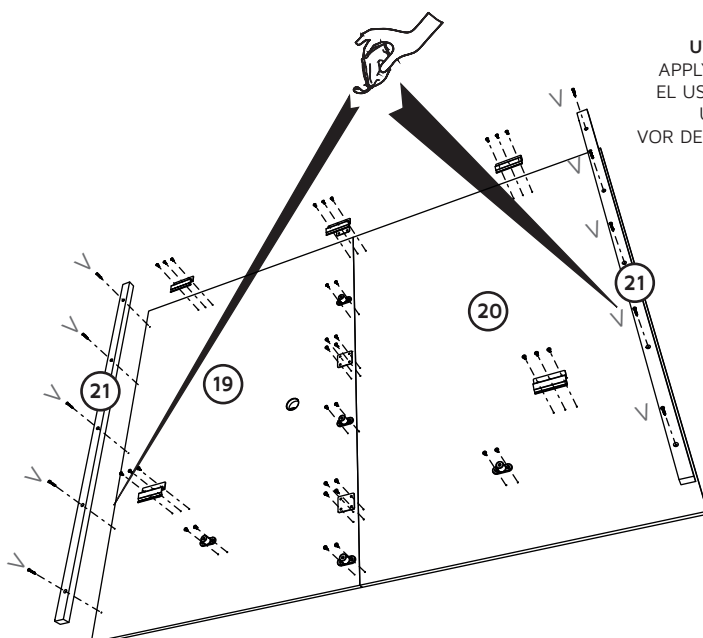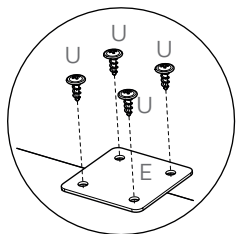


02

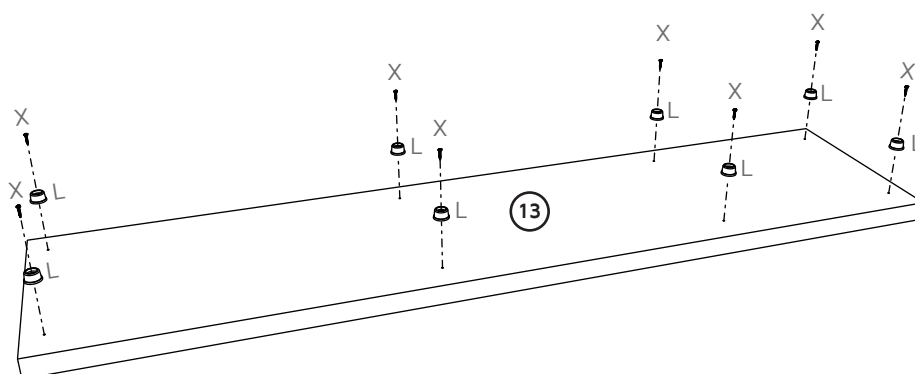


03


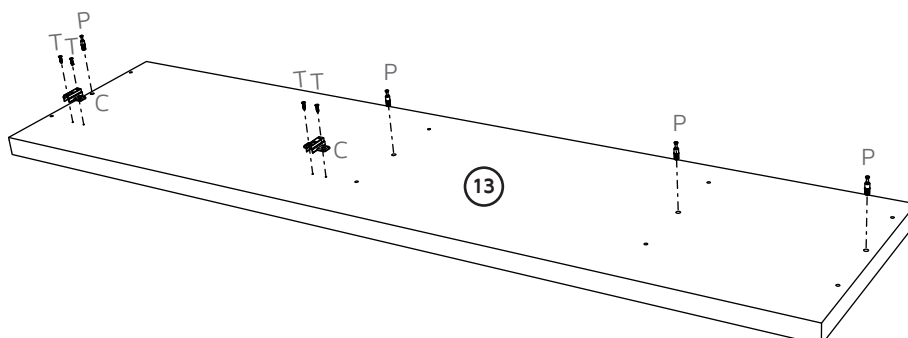


04

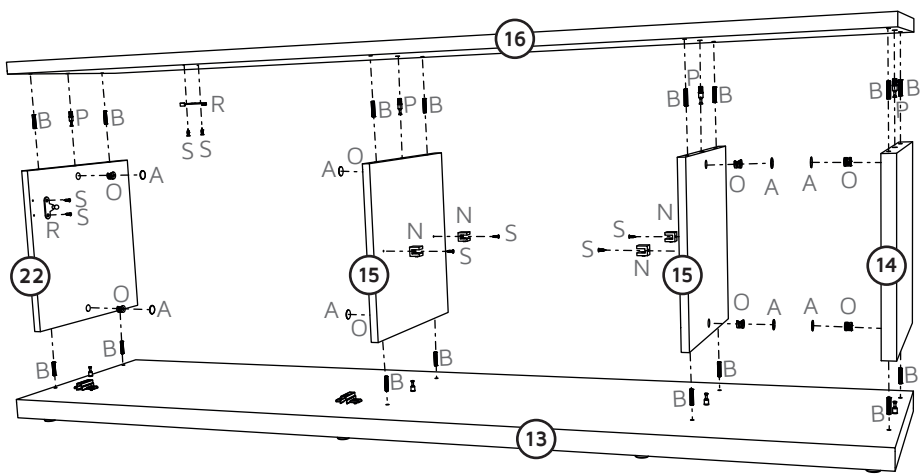

05

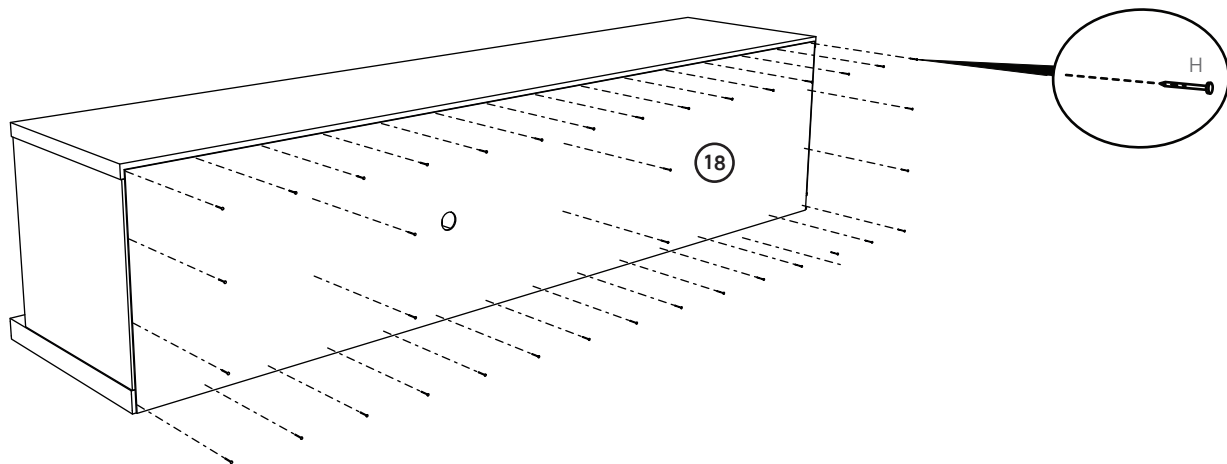

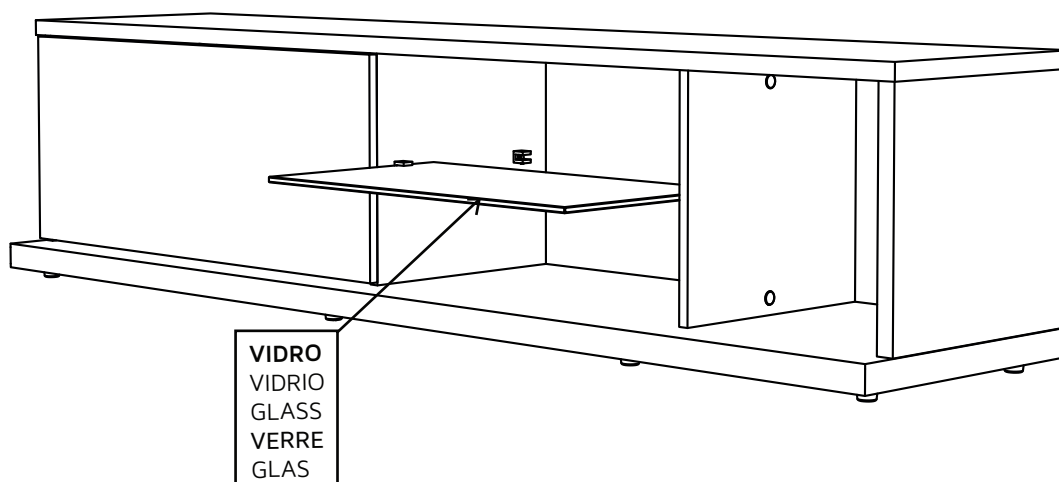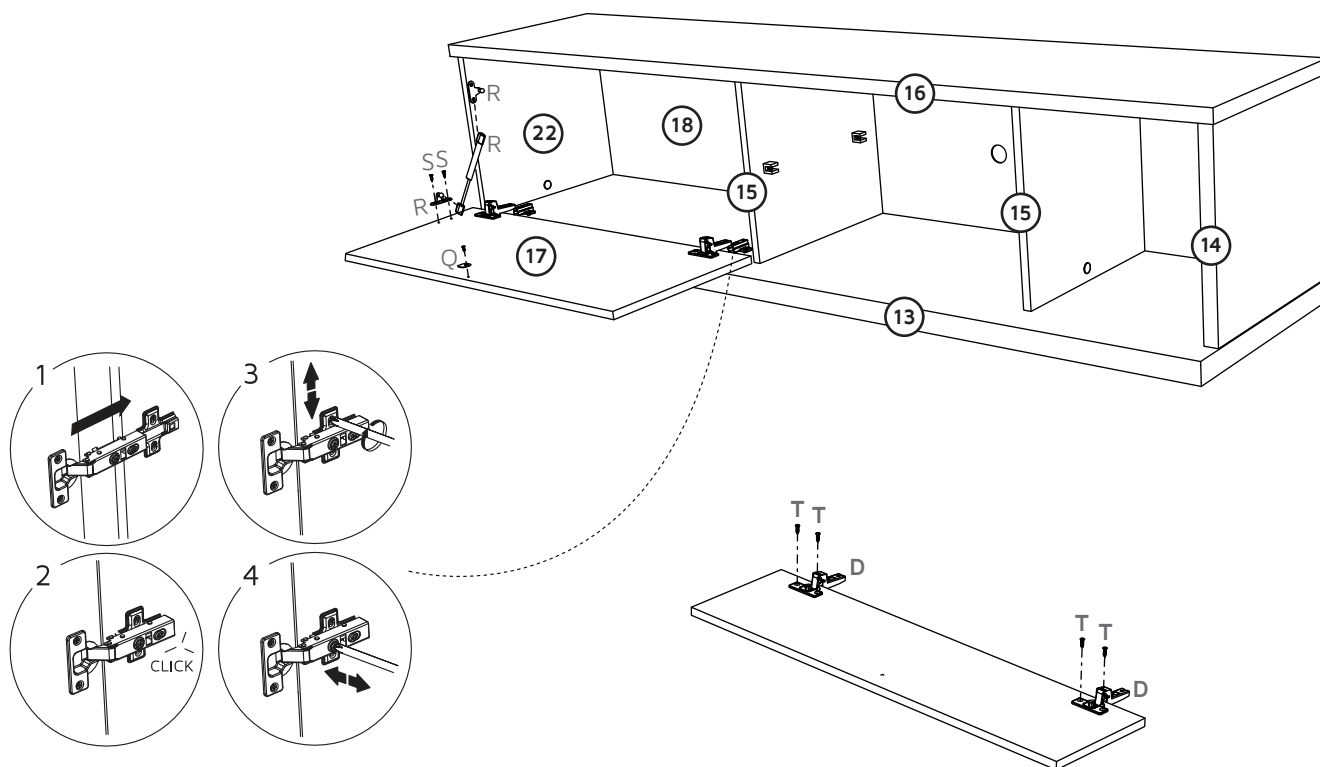





Medidas para realizar a furação da parede  
(em milímetros).

Measurement to drill the wall  
(in millimeters).


Medidas para realizar la perforación de la pared  
(en milímetros).

Mesures pour percer le mur  
(en millimètres).

Maße zum Bohren der Wand  
(in Millimetern).

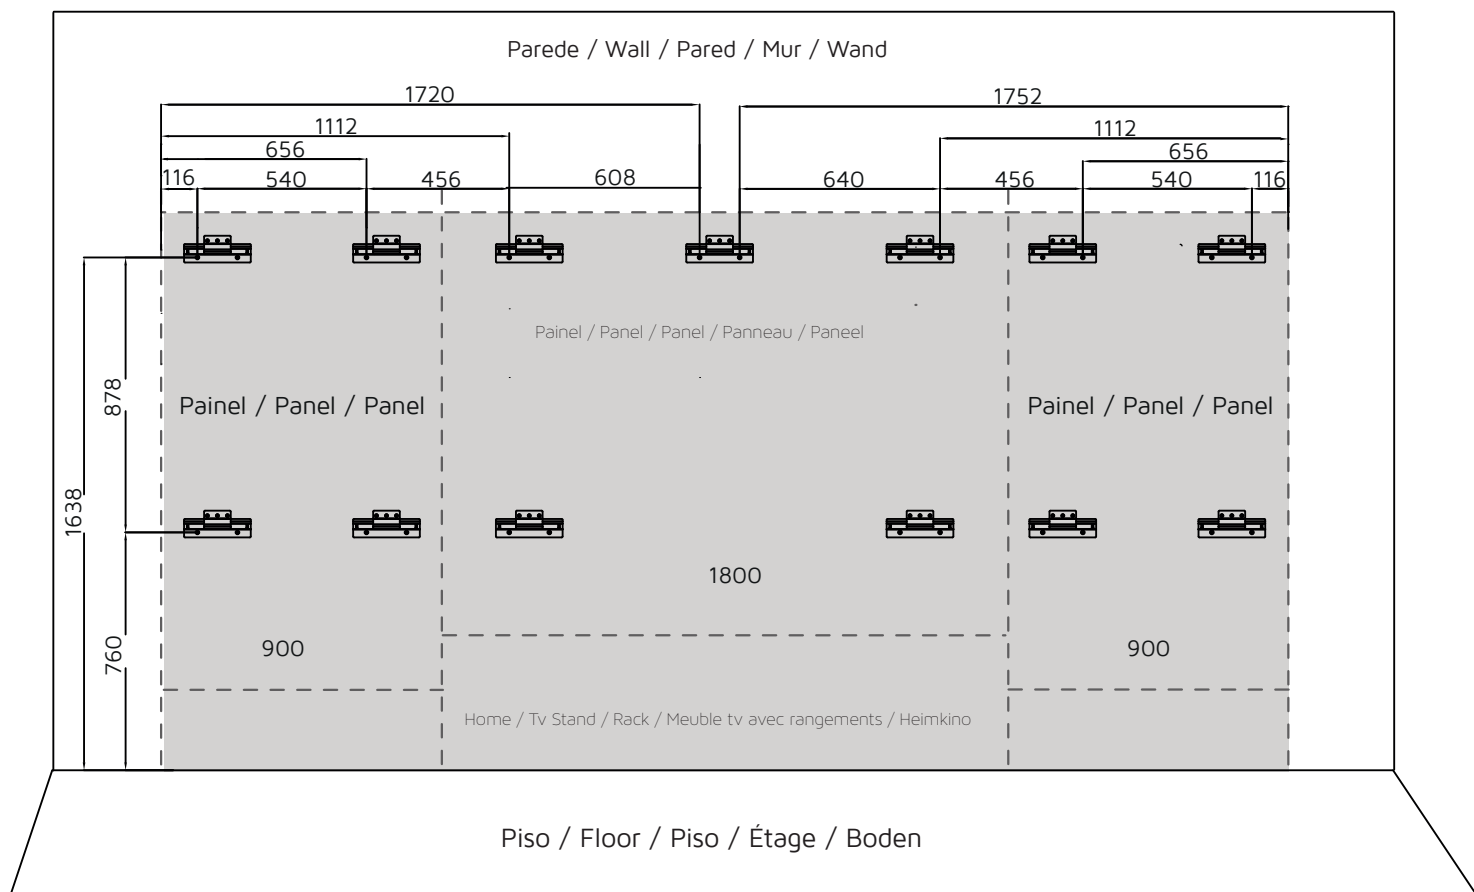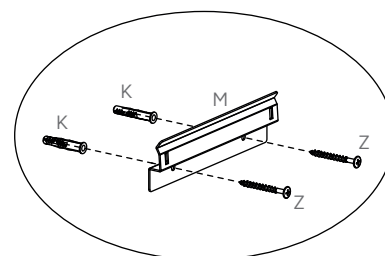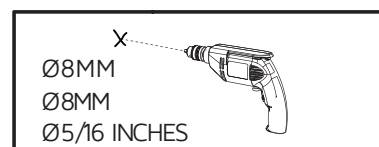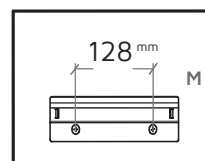

09

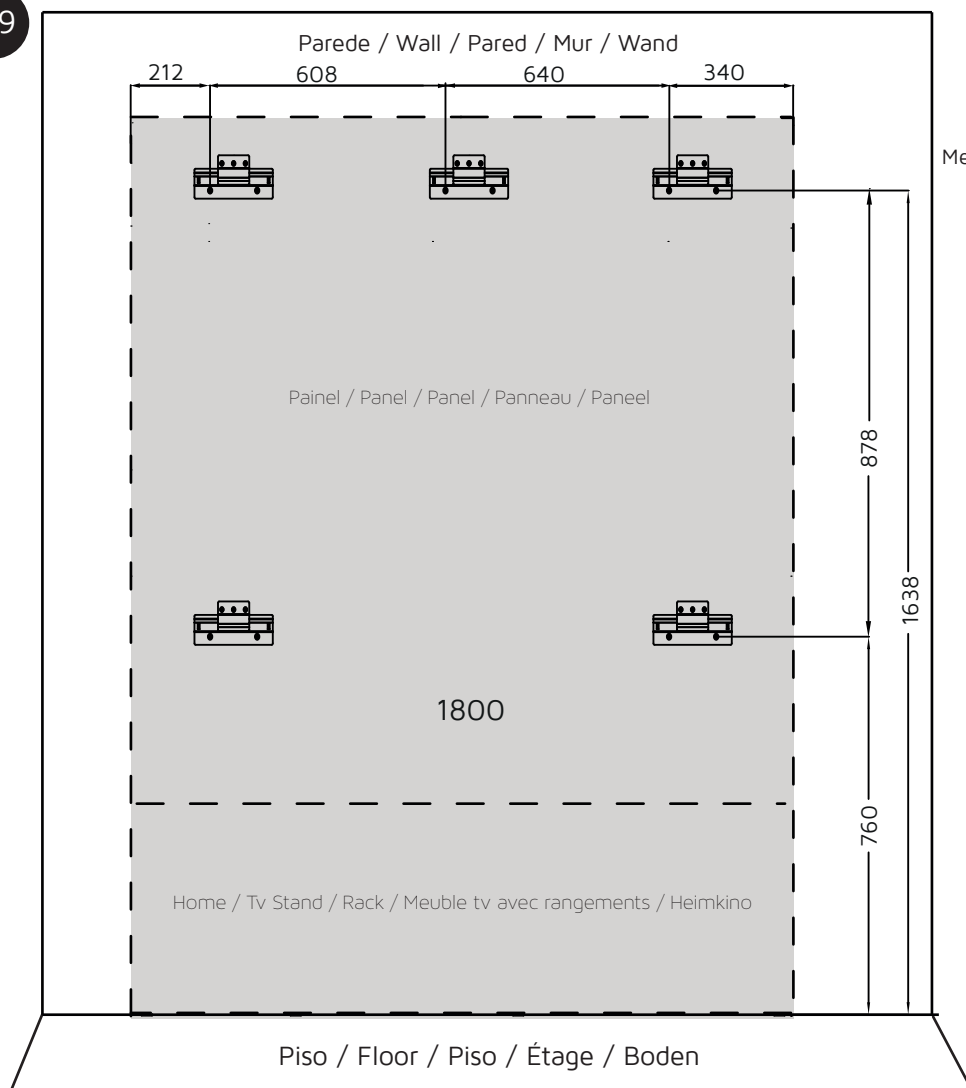




Medidas para realizar a furação da parede  
(em milímetros).

Measurement to drill the wall  
(in millimeters).


Medidas para realizar la perforación de la pared  
(en milímetros).

Mesures pour percer le mur  
(en millimètres).

Maße zum Bohren der Wand  
(in Millimetern).

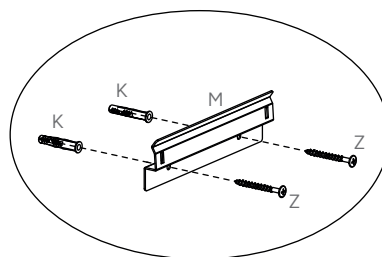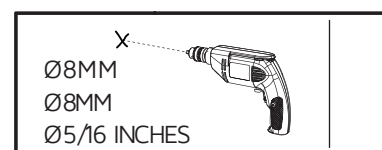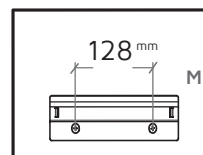

10

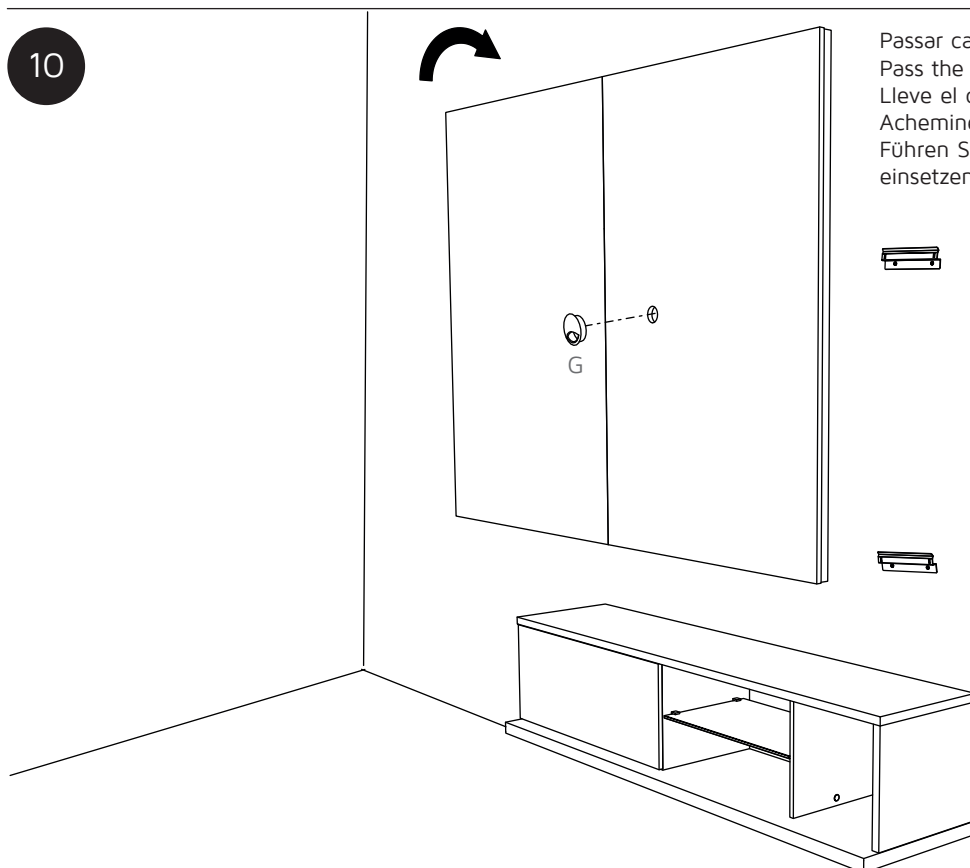

Passar cabos antes de encaixar Painel.

Pass the cables through the back before Panel.


Lleve el cables antes de encajar el panel.

Acheminez les câbles avant de fixer le panneau.


Führen Sie die Kabel durch, bevor Sie das Wandpaneel einsetzen.



1

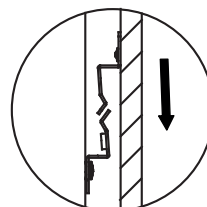

2

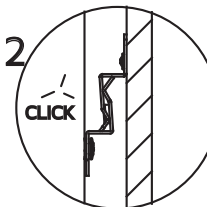

08