


MANUAL DE MONTAGEM

ASSEMBLY INSTRUCTIONS

INSTRUCCIONES DE MONTAJE





NOTICE DE MONTAGE



MONTAGEANLEITUNG

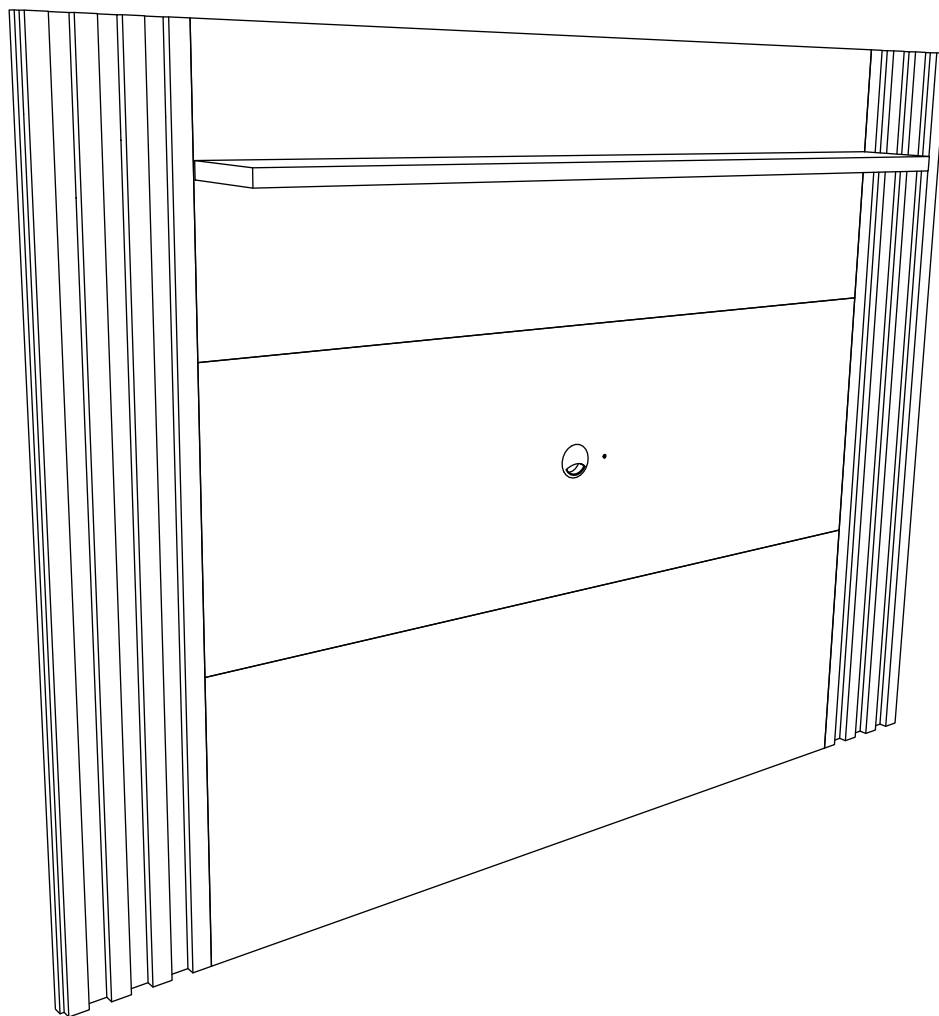

COD: 257800

COD: 257900

A COD. 2088 UX8 (04X) 	B COD. 1668 6.0 x 30 (02X) 	C COD. 2014 (02X) 	D COD. 3557 4.0 x 14 (08X) 	E COD. 3525 4.0 x 25 (25X) 
F COD. 0715 4.5 x 50 (05X) 	G COD. 4505 6.0 x 100 (01X) 	H COD. 4536 6.0 x 80 (03X) 	I PASSA FIO - 01X WIRE CHANNEL - 01X PASAJE DE ALAMBRE - 01X PASSE-CÂBLES - 01X RÜCKWANDVERBINDER - 01X 	J COD. 0348 (01X) 
K COD. 13484 (02X) 	L COD. 4474 (01X) SUPORT TV - 01X SOPORTE TV - 01X SUPPORT MURAL POUR TV - 01X SUPPORT MURAL POUR TV - 01X FERNSEHSTÄNDER - 01X 			

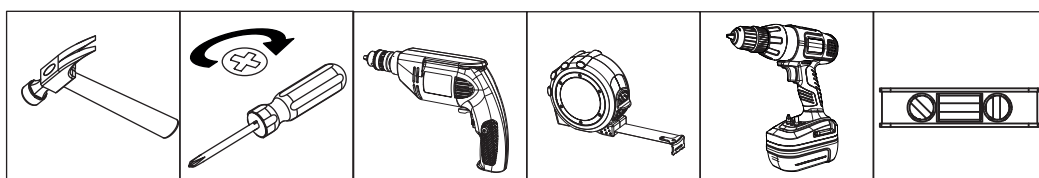

DESCRIÇÃO/DESCRIPTION/DESCRIPCIÓN/DESCRIPTION/BESCHREIBUNG





CÓD:257800/257900							
PEÇA PART PIEZA STÜCK	QUANTIDADE QUANTITY CANTIDAD QUANTITÉ MENGE	DESCRIÇÃO	DESCRIPTION	DESCRIPCIÓN	DESCRIPTION	BESCHREIBUNG	CAIXA BOX CAJA BOÎTE BOX
01	01	PAINEL CENTRAL	CENTER PANEL	PANEL CENTRAL	PANNEAU CENTRALE	ZENTRALE PANEEL	01
02	01	PAINEL SUPERIOR	UPPER PANEL	PANEL SUPERIOR	PANNEAU SUPÉRIEURES	OBERE PANEEL	01
03	01	PAINEL INFERIOR	BACK PANEL	PANEL INFERIOR	PANNEAU INFÉRIEURES	UNTERE PANEEL	01
04	02	PAINEL LATERAL	SIDE PANEL	PANEL LATERAL	PANNEAU CÔTÉ	SEITE PANEEL	01
06	01	PRATELEIRA	TOP SHELF	ESTANTE	ÉTAGÈRE	FACH	01
07	01	SARRAFO SUPERIOR	UPPER BATTEN	SARRAFO SUPERIOR	LATTES SUPÉRIEURES	OBERE HOLZLEISTE	01
08	01	RÉGUA PAREDE	WALL WEDGE	CUÑA DE PARED	COIN DE MUR	WANDKEIL	01

PA257800 - 1800MM

L:1800mm A:1341mm P:183mm
W:70.87in H:52.80in D:7.21in
L:1800mm A:1341mm P:183mm
L:1800mm H:1341mm P:183mm
B:1800mm H:1341mm T:183mm


PA257900 - 2178MM


L:2178mm A:1341mm P:183mm
W:85.75in H:52.80in D:7.21in
L:2178mm A:1341mm P:183mm
L:2178mm H:1341mm P:183mm
B:2178mm H:1341mm T:183mm

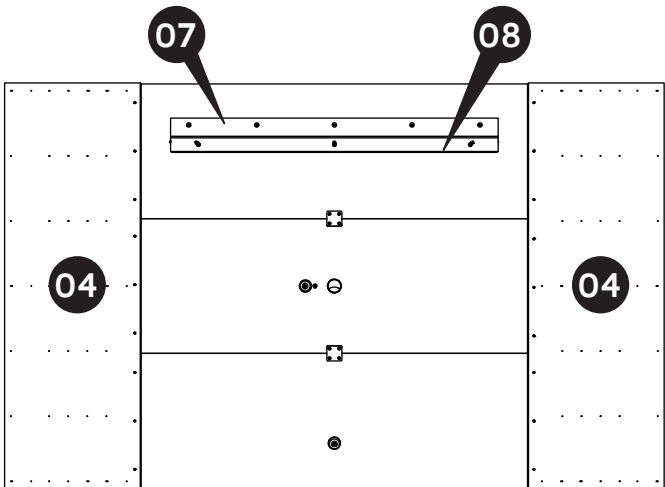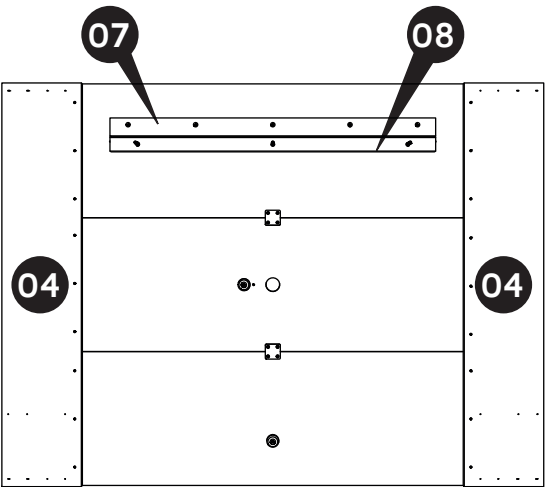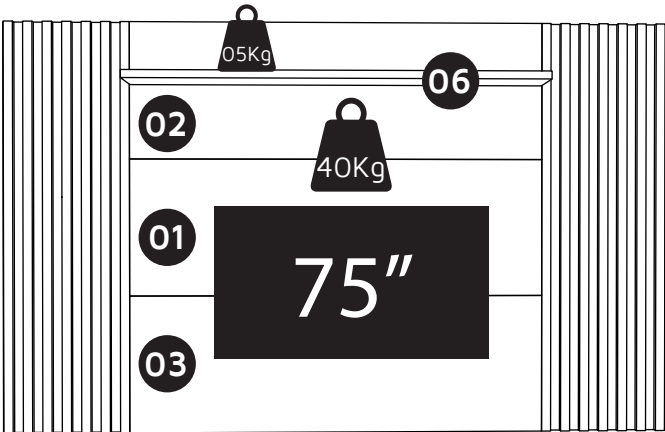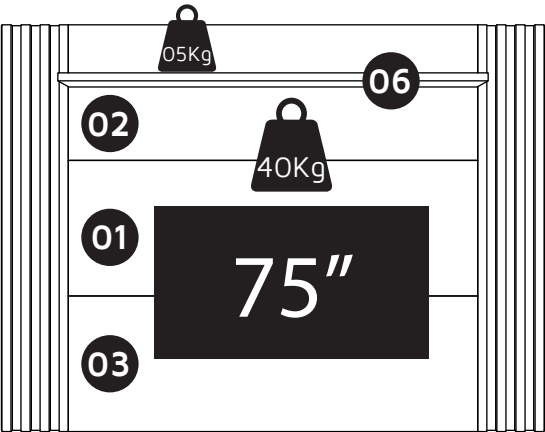


 05Kg = 11Lb
40Kg = 88Lb

01

C	D	E	K
COD. 2014	COD. 3557	COD. 3525	COD. 13484
			

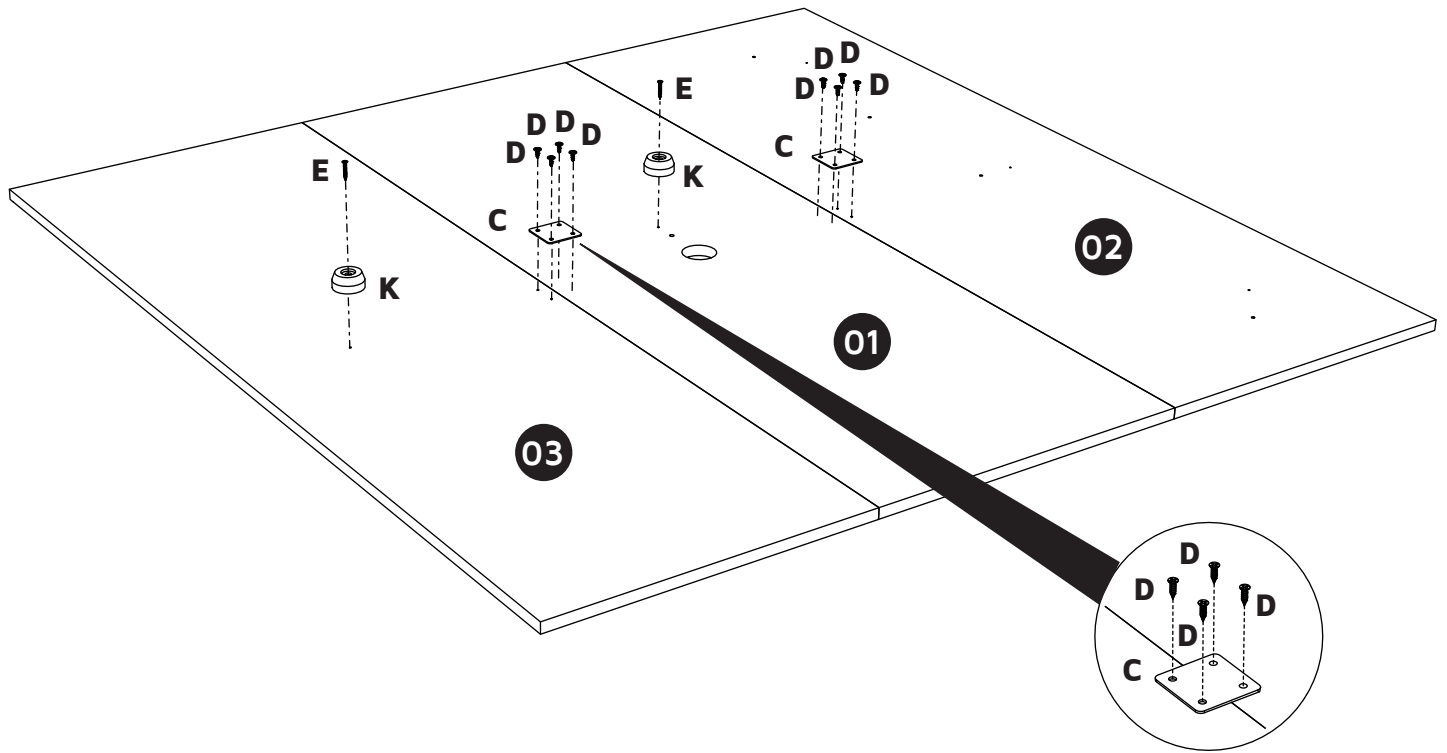


02

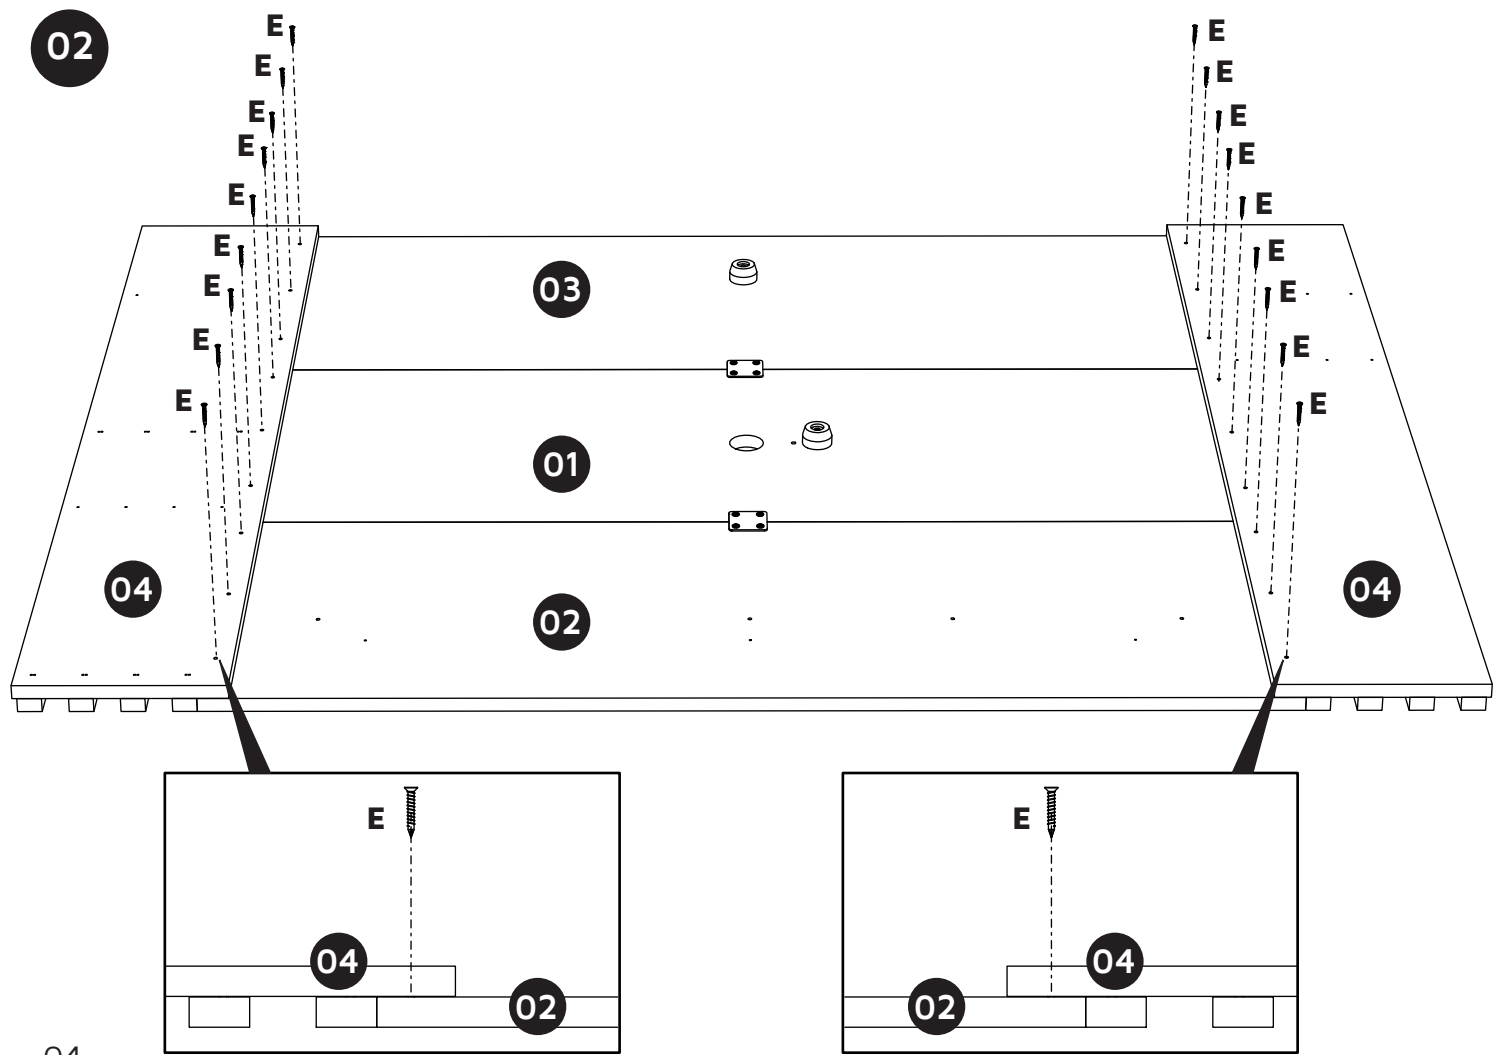

03


PA257800 - 1800MM

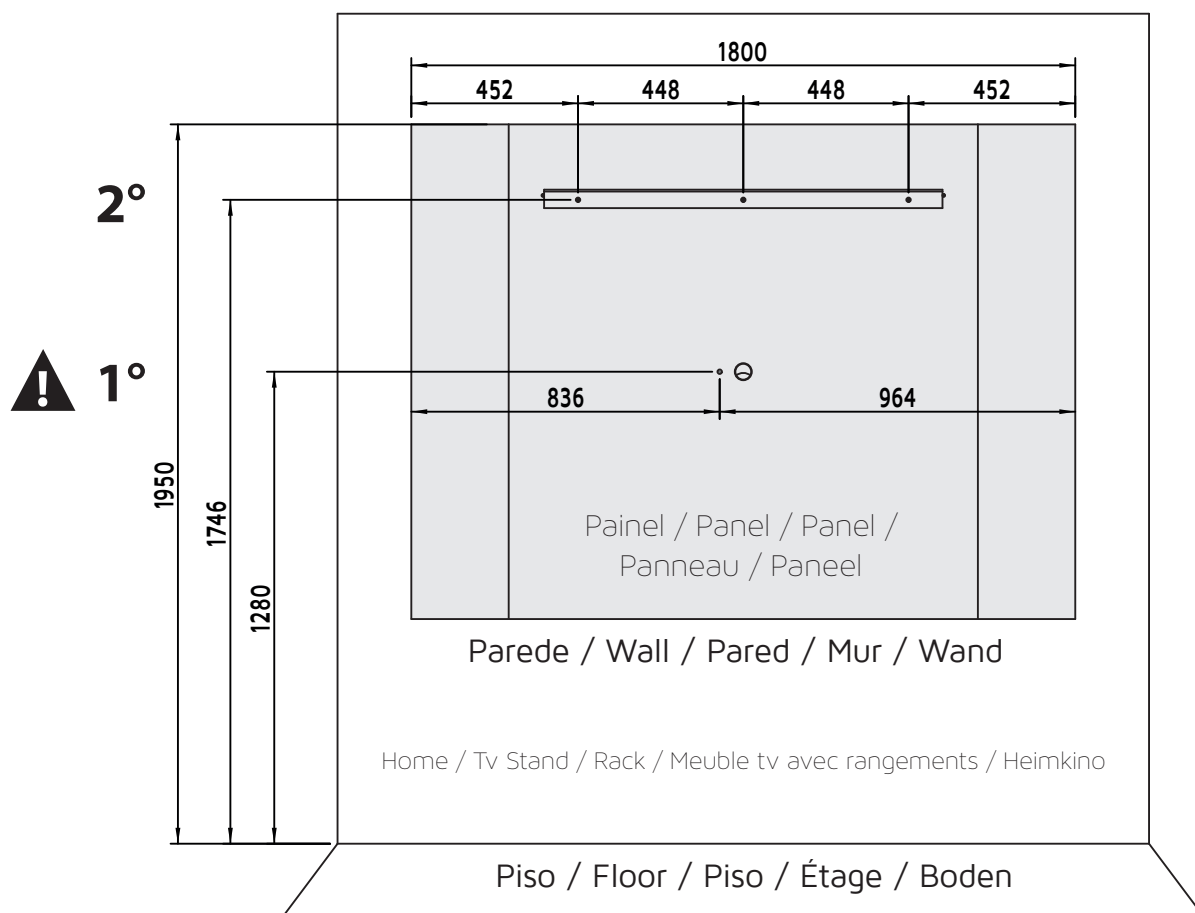


04

PA257900 - 2178MM

07

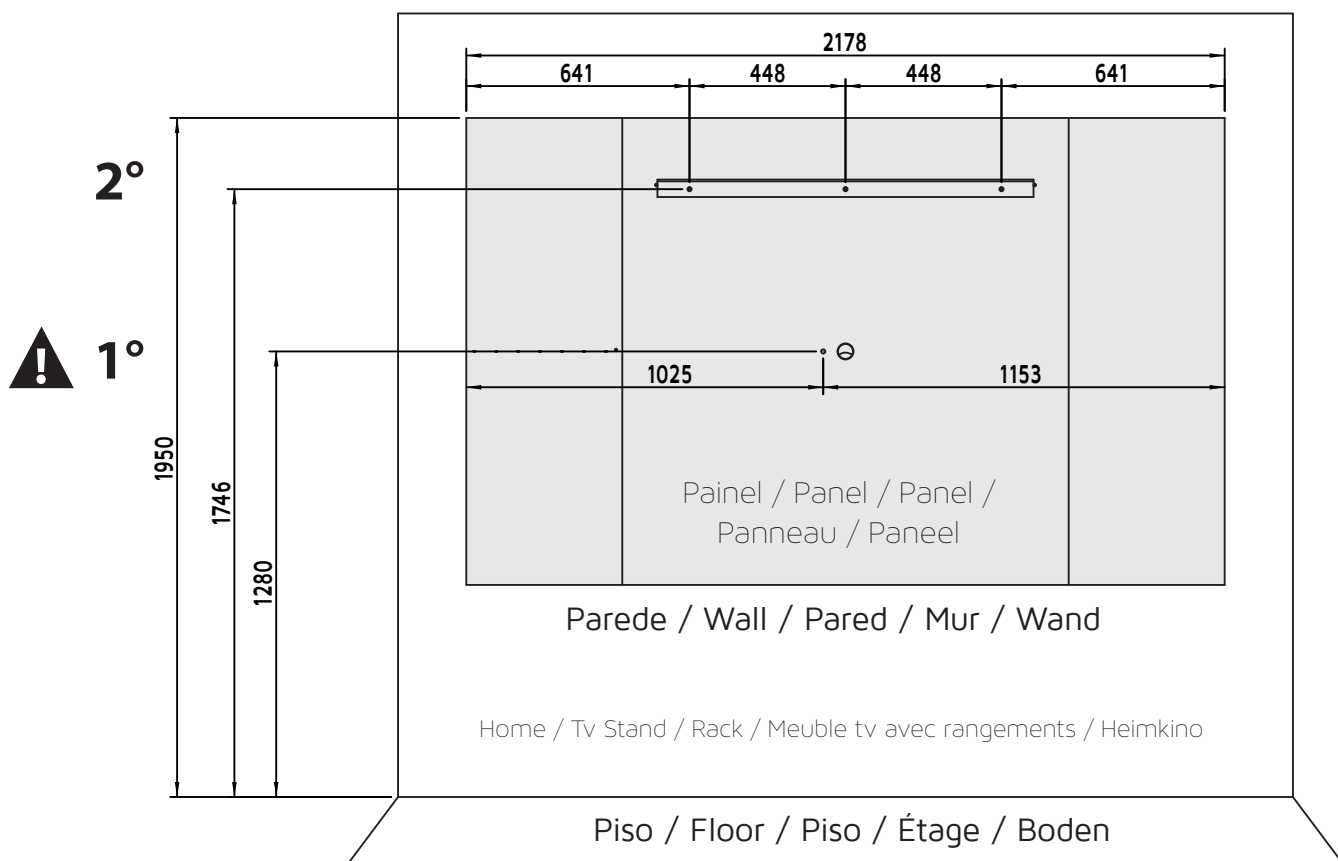

A	E	H	J
COD. 2088	COD. 3525	COD. 4536	COD. 0349
			

Parede / Wall / Pared / Mur / Wand



Medidas para realizar a furação da parede
(em milímetros).

Measurement to drill the wall
(in millimeters).

Medidas para realizar la perforación de la pared
(en milímetros).

Mesures pour percer le mur
(en millimètres).

Maße zum Bohren der Wand
(in Millimetern).

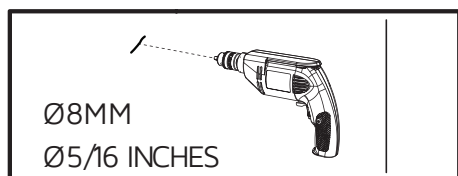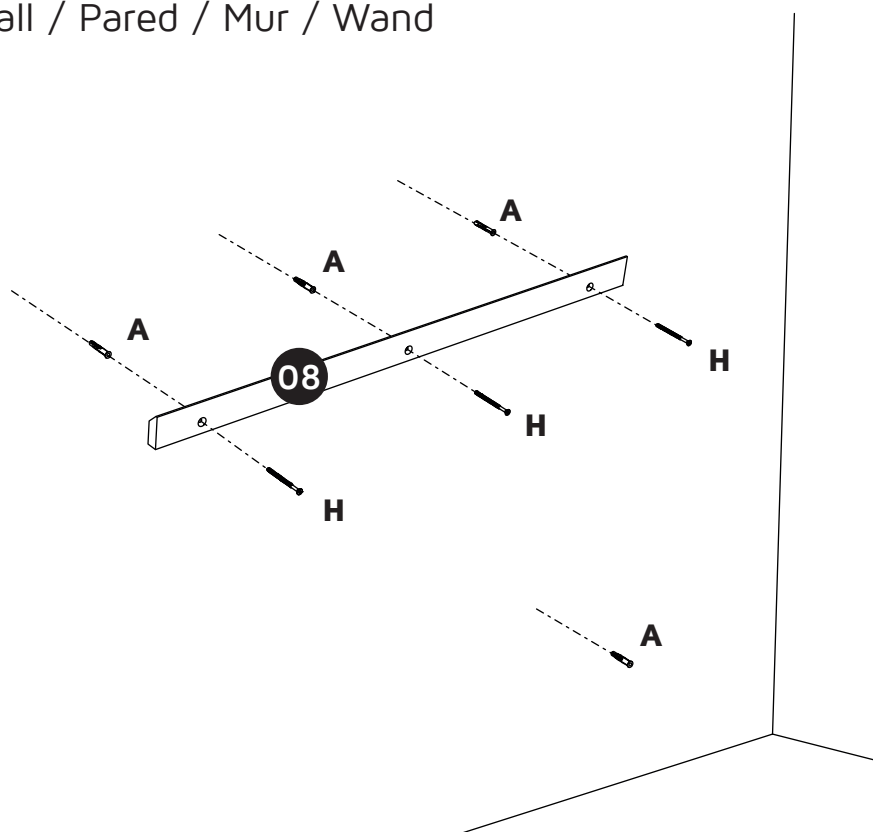


Utilize a cola PVA antes de aparafusar.

Use the PVA glue before screwing.

El uso de pegamento PVA antes de atornillar.


Utilisez la colle PVA avant de visser.

Vor dem Verschrauben verwenden Sie PVA-Kleber.

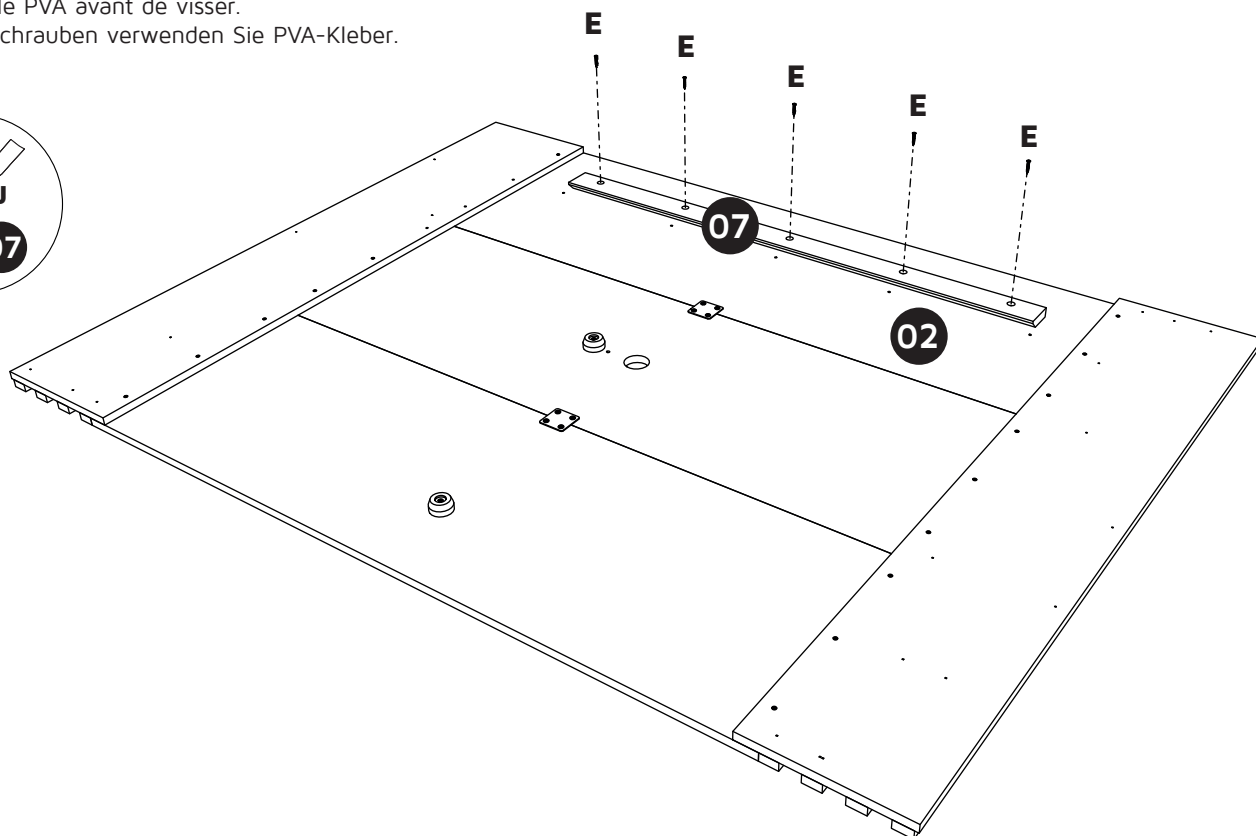


07



B	F
COD. 1668	COD. 0715
	

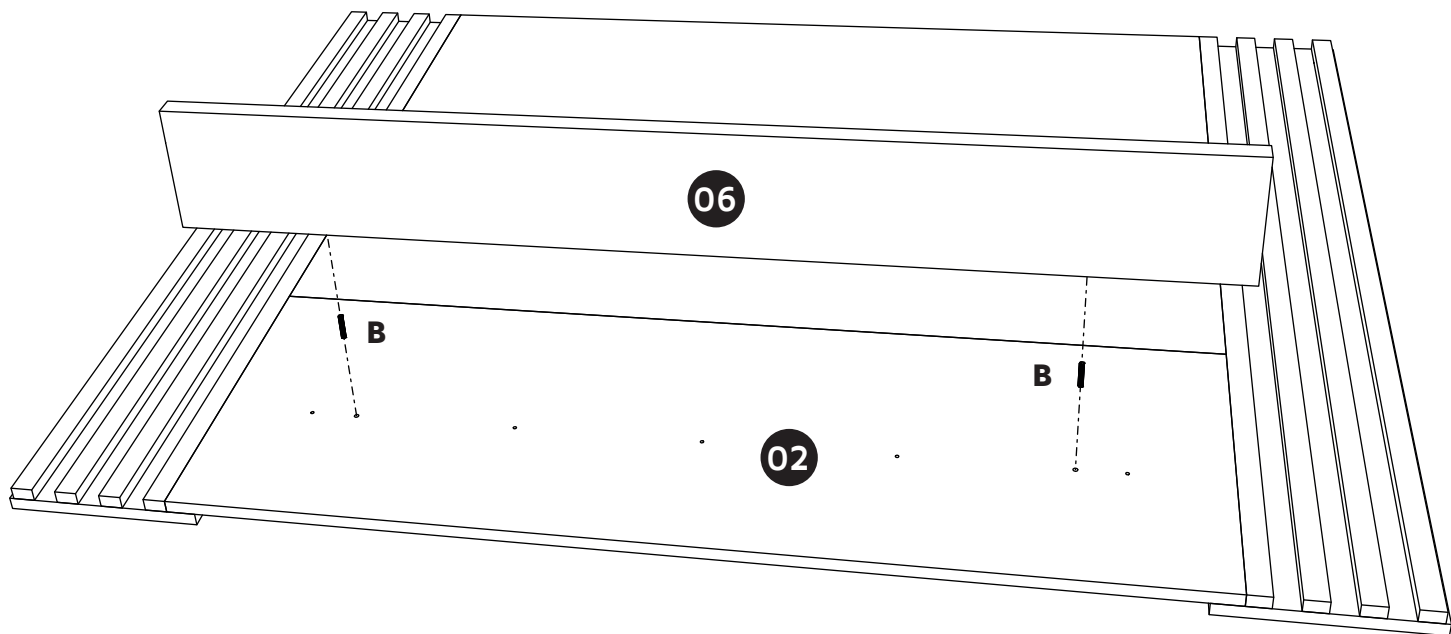


08

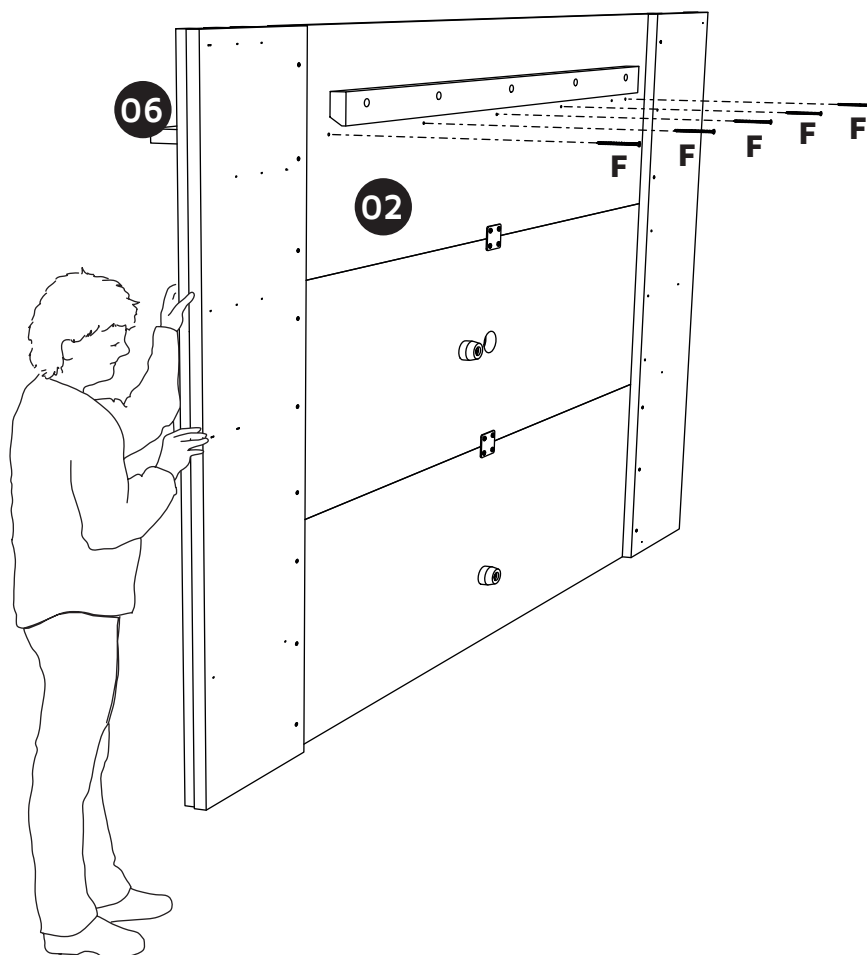


09

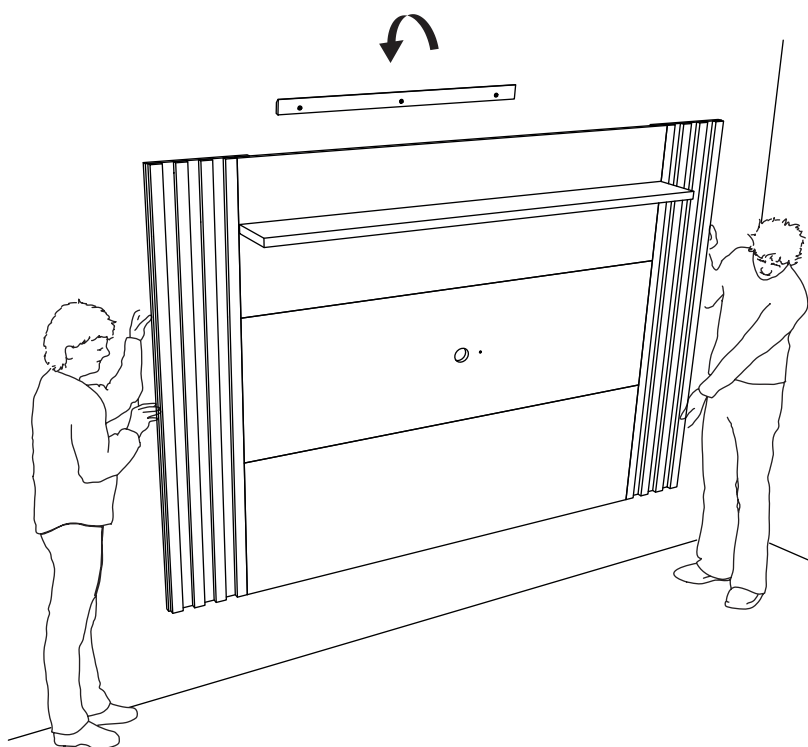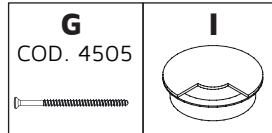

Passar cabos antes de encaixar Painel.
 Pass the cables through the back before Panel.
 Lleve el cables antes de encajar el panel.
 Acheminez les câbles avant de fixer le panneau.
 Führen Sie die Kabel durch, bevor Sie das Wandpaneel einsetzen.

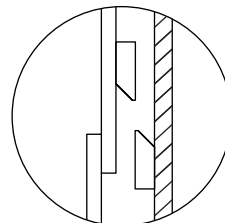

1

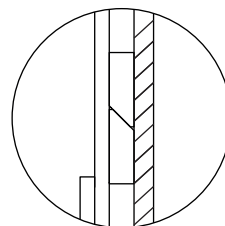

2

10

